
front side
正面

back side
反面

POWERTREND audio

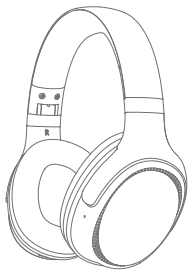

POWERTREND OSLO
WIRELESS HEADPHONES

**USER MANUAL**

**Packing list:**



Headphones *1



Dual 3.5mm audio cable*1



Type-c Charging cable*1



User Manual*1





Certificate of quality *1



**Product structure:**

1. Mode button
2. Volume -/Previous
3. Volume +/Next
4. Power button
5. AUX
6. Paring indicator
7. Charging indicator
8. Charging port

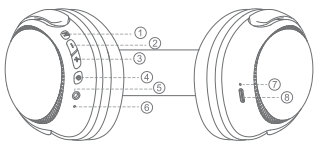



**Bluetooth headphones turn ON/OFF**

1.Turn on: Long press the power button for 3 seconds, the blue light of the paring indicator will be on for a few seconds.
2.Turn off: Long Press the power button for 5 seconds.

**Bluetooth connection**

Follow the steps (Please make sure that your phone is built-in Bluetooth function)
1.Turn on the headphones, the paring indicator flashes alternately with blue and red, the headphone enter the pairing status.
(Note: The headphones can automatically enter pairing status after power on if there is no re-connection. As the headphones can automatically reconnect with the last device that you had paired. To re-connect, you just need to turn it on.)
2. Activate the Bluetooth function and search for " POWERTREND OSLO"referring to your phone instructions.
3. Manually click "POWERTREND OSLO" to connect.

**Answer incoming calls**

Short press the power button to answer incoming calls.
Tip: Since some mobile phones default to answer calls via their own receiver, please refer to the instructions of your phone and set on your phone.



**End the current call**

Short press the power button to end the current call.

**Mode Switching**

Short press the mode button to switch mode(FM/TF card/Bluetooth)

**Reject incoming calls**

Press the power button for 2 seconds when there comes a call.

**Last number redial**

Double press the Power button to redial the last calling number.

**Voice assistant**

Double click the mode button to activate the voice assistant.

**Music playing**

1.Play/Pause: Short press the Power button;
2.PREV: Long press - to select the previous song;
3.NEXT: Long press + to select the next song;
4.VOL + : Short press + to increase volume;
5.VOL - : Short press - to decrease volume.

**Wired mode: Dual 3.5mm Audio Cable**



**connecting To Audio Jack**

1. Plug and play: Connecting the headphones to a music player with the provided dual 3.5mm audio cable, the headphones can be used as wired headphones without starting.
2. In this mode, you can't use any function of the headphones, including pause playback, volume adjustment, microphone and so on.

**TF card mode**

Insert a TF card and click the mode button, the headphones will recognize automatically to broadcast music.

**FM Operating Instructions**

1.Short press the M button to choose FM mode;
2.Short press power switch to search channel;
Long press - and + to select the desired channels.
Short press the - or + button to adjust the volume.

**To charge the headphones**

1.As product is built-in non-removable and rechargeable battery, please use the provided charging cable to charge.
2.Fully charge the product before the first use. It takes 2-3 hours to charge for the subsequent use.



3.The red light of the charging indicator is always on when charging, and the charging indicator turns blue when the battery is fully charged.

**Notes**

a. Please choose the charger that is certified by the regular manufacturer.
b.The battery performance may decrease as repeating charging and using the product. It's a normal phenomenon for all rechargeable batteries.

**Specification:**

Bluetooth Version: V5.3
Battery: 500mAh
Play time: 55H(depends on the volume)
Talk time: 35H(depends on the volume)
Charging time: 2.5Hours
TYPE C port
Product size: 196*182*82mm
Net weight: 225g
Speaker size: Φ40mm
Input voltage: 5V/0.5A

**Warnings**

1. Please follow the instruction to operate
2. Please charge the headphones with input power



below 5V/0.5A, in order to protect the battery;
3. Please store or use the headphones in a normal temperature environment.
4. Please keep the headphones from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti-high temperature.
5. Don't jam the ports of the headphones, such as charger port, LED port and microphone etc..



**FCC Caution**:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning



the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



材质：128g双铜纸　双面印刷, 风琴折

印刷色号(Printing color number)：C:0 M:0 Y:0 K:70

尺寸(Size)：55 X 77 mm